



UT3P SPRAYER QUICK SETUP GUIDE

Refer to Operators Manual for Complete Setup Instructions

Set Up Tractor Hydraulics - All Machines

Important: Check hydraulic oil level. Fill if necessary. Set SCV flow rates and detent times as shown in table.

SCV	Function	Flow	Detent Time
I	Pump	1-2	Continuous
II	Main Wings	10	Continuous
III	Swing Wings	10	Continuous

Unfolding the Wings -- from Transport Position to Field Position

- The hydraulic wing sections unfold by pressing the control button in the tractor cab. The left and right sides unfold at the same time. Control switches may vary, refer to the tractor manual for instructions.
- Unfold the Main Wings first. While seated in the operator's station, press and hold the hydraulic switch forward to unfold the Main Wings.
- Unfold the Main Wings until movement stops.
- Press and hold the hydraulic switch forward to unfold the Swing Wings.
- Unfold the Swing Wings until movement stops.
- Before use, ensure both wings have unfolded fully and are straight.
- NOTE: If Swing Wings do not unfold verify that the latch has unlatched.

Folding the Wings -- from Field Position into Transport Position

- The wing sections fold by pressing the control button in the tractor cab. The left and right sides fold at the same time. Control switches may vary, refer to the tractor manual for instructions.
- Fold the Swing Wings first. While seated in the operator's station, press and hold the hydraulic switch back to fold the Swing Wings.
- Fold the Swing Wings until movement stops and the Swing Wing is against the Main Wing section.
- Press and hold the hydraulic switch back to fold the Main Wings.
- Fold the Main Wing until movement stops and the wings are in the transport position.

Product Plumbing Setup and Calibration

- Refer to Operators Manual for complete product plumbing setup, calibration, and servicing.