



UT3P SPRAYER with HYDRAULICS QUICK SETUP GUIDE

Refer to [Operator's Manual](#) for complete Setup Instructions

Tractor Hydraulics

⚠ IMPORTANT: Check hydraulic oil level. Fill the reservoir if necessary. Set System Control Valve (SCV) flow rates and detent times as shown in the following table.

SCV	Function	Color	Flow (/10)	Detent Time (sec.)
I	Pump	Red	3-5	Continuous
II	Main Wings	Green	2	10 ⁱ
III	Swing Wings	Orange	2	10

Unfolding the Boom – from Transport Position to Field Position

1. Disengage the Wing Transport Safety Pins on the Transport Rests.
2. Engage SCV II until the Main Wings have unfolded.
3. Engage SCV III until the Swing Wings are fully unfolded. They will be in-line with the Center Section when fully unfolded.
4. If a Swing Wing does not unfold, check if its frame latch has disengaged.

Folding the Boom – from Field Position to Transport Position

1. Engage SCV III until the Swing Wings are fully folded.
2. Engage SCV II until the Main Wings are fully folded.
3. Engage the Wing Transport Safety Pins on the Transport Rests.

ⁱ Detent time is dependent on the desired dead-head pressure.