




FAST AP COULTER QUICK MOUNT GUIDE

Refer to Fast AP Coulters Operators Manual for Complete Setup Instructions

Installing Lower Coulters Assembly

- Start with a properly assembled lower coulters assembly (A)
- Lift the lower coulters assembly (A) and from the underside, insert the octagon shaft (B) into the upper mount casting (C)

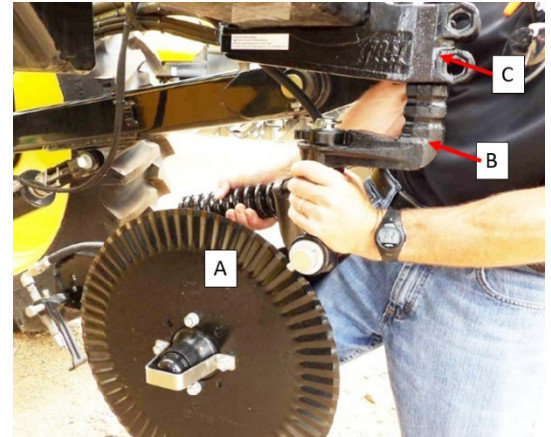

Adjust Height of Coulters

- Raise the lower coulters assembly to the desired height
- Once at desired height, align both upper mount cross bolt holes with grooves in octagon shaft and insert (2) cross bolts



Torque Cross Bolts

- Torque the cross bolts to a minimum of 210 ft-lbs. (285 Nm)
- Increase torque until the octagon shaft no longer wiggles in the upper mount casting
- Tighten bolts by working back and forth from one bolt to the other to improve the clamping of the upper mount casting

